

SWITCH AND SOCKET SERIES PRODUCT CATALOGUE

Blossom the charm of your
quality life



Blossom the charm of your quality life

More aesthetic, more elegant, more function, enables you to fully express your creativity and style. Symbol of lightness, thin and sleek, the new range is a breath of fresh air. Each object is a beautiful whole unto itself. Let your desire for elegance soar.

● White ● Gold ● Gray ● Black

Switch socket



X1-01
1 gang 1 way switch

X1-02
1 gang 2 way switch



X1-09
1 gang 1 way switch

X1-10
1 gang 2 way switch



X1-17
1 gang Doorbell switch



X1-21
1 gang duplex socket



X1-03
2 gang 1 way switch

X1-04
2 gang 2 way switch



X1-11
2 gang 1 way switch

X1-12
2 gang 2 way switch



X1-18
1 gang universal socket



X1-22
Double duplex socket



X1-05
3 gang 1 way switch

X1-06
3 gang 2 way switch



X1-13
3 gang 1 way switch

X1-14
3 gang 2 way switch



X1-19
Double duplex socket



X1-23
1 gang 1 way switch with indicator
1 gang socket



X1-07
4 gang 1 way switch

X1-08
4 gang 2 way switch



X1-15
4 gang 1 way switch

X1-16
4 gang 2 way switch



X1-20
1 gang 1 way switch with indicator
1 gang universal socket



X1-24
1 gang multi socket

Switch socket



X1-25
1gang universal 2 PIN socket




X1-26
2gang universal 2 PIN socket



X1-27
3gang universal 2 PIN socket




X1-28
1gang 1way switch with indicator
1gang universal 2 PIN socket

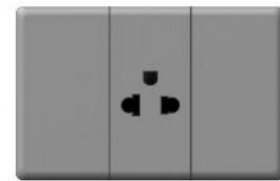

X1-29
1gang universal socket



X1-30
Double duplex socket

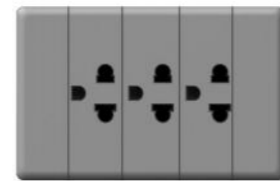

X1-31
3 gang universal socket



X1-32
1gang 1way switch with indicator
1gang universal socket



X1-33
1 gang duplex socket



X1-34
Double duplex socket



X1-35
3 gang duplex socket



X1-36
1gang 1way switch with indicator
1gang socket



X1-37
1gang 1way switch with indicator
2gang socket



X1-38
1gang 1way switch with indicator
2gang universal socket



X1-39
2gang 1way switch with indicator
1gang universal socket



X1-40
2gang 1way switch with indicator
1gang socket

Switch socket



X1-41
2gang multi socket



X1-42
1gang 1way switch with indicator
1gang multi socket



X1-43
TV socket



X1-44
1 gang satellite socket



X1-45
1 gang telephone socket



X1-46
1 gang Data socket



X1-47
1 gang RJ11 telephone socket
1 gang satellite socket



X1-48
1 gang Dimmer
1 gang Fan speed controller



X1-49
1gang 2USB(A+C)socket
15A 127V-250V-1gang multi socket



X1-50
1gang 2USB(A+C)socket
15A 127V-1gang socket



X1-51
1gang 2USB(A+C)socket
15A 127V-1gang universal socket




X1-52
15A 127V-Double duplex socket
with 2USB(A+C)



X1-53
16A 127-250V-universal Double
duplex socket with 2USB(A+C)

Function keys

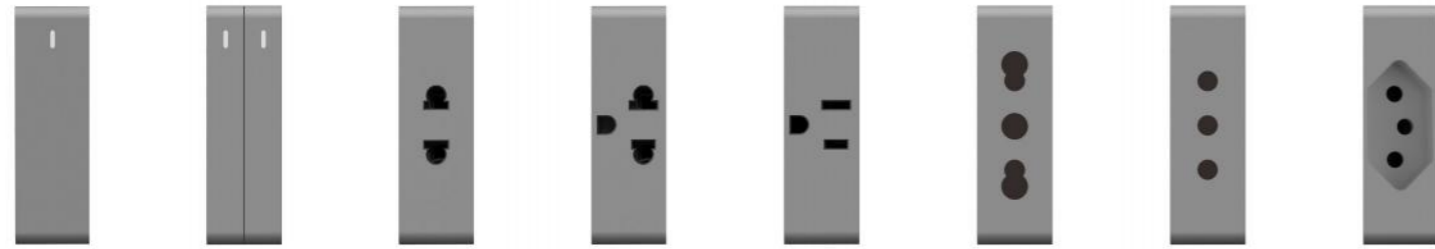

X1-01 1 gang 1 way switch (1/3)
1 gang 2 way switch (1/3)
1 gang 3 way switch (1/3)

X1-02 2 gang 1 way switch (1/3)
2 gang 2 way switch (1/3)

X1-03 2P socket (1/3)


X1-04 2P socket+T (1/3)

X1-05 2P socket+T (1/3)

X1-06 2P socket+T (1/3)

X1-07 2P socket+T (1/3)

X1-08 10A 2P socket+T (1/3)
20A 2P socket+T (1/3)

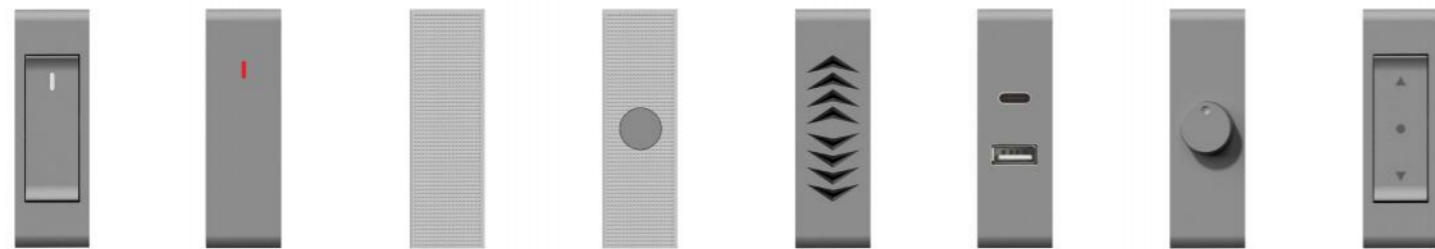

X1-09 20A switch (1/3)

X1-10 20A switch (1/3)

X1-11 Sensor switch (1/3)

X1-12 Emergency light (1/3)

X1-13 Beep switch (1/3)

X1-14 USB+type-C (1/3)

X1-15 Fan speed (1/3)
Light dimmer (1/3)

X1-16 Curtain switch (1/3)



X1-17 Satellite socket (1/3)

X1-18 Computer socket (1/3)
TEL socket (1/3)

X1-19 voice operated switch (1/3)
Touch delay switch (1/3)

X1-20 Blank (1/3)

X1-21 Blank (1/6)

X1-22 1 gang 1 way switch (1/2)
1 gang 2 way switch (1/2)
1 gang 3 way switch (1/2)

X1-23 2 gang 1 way switch (1/2)
2 gang 2 way switch (1/2)

X1-24 2P socket (1/2)



X1-25 2P socket+T (1/2)

X1-26 2P socket+T (1/2)

X1-27 2P socket+T (1/2)


X1-28 Satellite socket (1/2)

X1-29 Computer socket (1/2)
TEL socket (1/2)

X1-30 USB+type-C (1/2)

X1-31 Fan speed (1/2)
Light dimmer (1/2)

Function keys

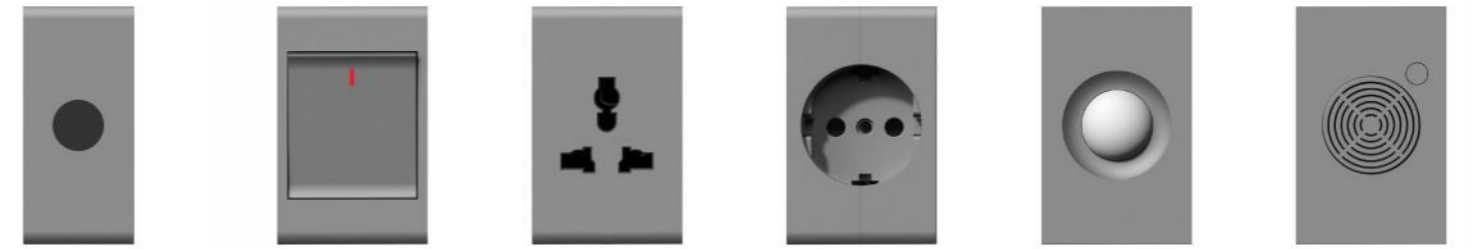

X1-32 voice operated switch (1/2)
Touch delay switch (1/2)


X1-33 20A switch (2/3)

X1-34 2P socket+T (2/3)

X1-35 European socket (2/3)

X1-36 Motion Sensor (2/3)

X1-37 Doorbell with sound (2/3)

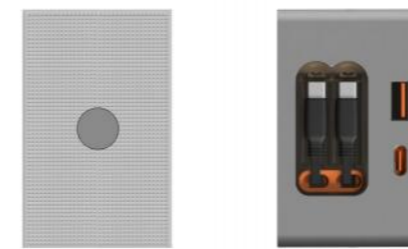

X1-38 Emergency light (2/3)

X1-39 Expansion cable fast charging socket (2/3)



X1-40 1 gang 1 way switch (3/3)
1 gang 2 way switch (3/3)
1 gang 3 way switch (3/3)

X1-41 Duplex socket2P+T (3/3)

X1-42 Duplex socket 2P+T (3/3)

X1-43 A panel (1/2)



X1-44 20A switch (3/3)

X1-45 Duplex socket2P+T+USB+type-C (3/3)

X1-46 Duplex socket 2P+T+USB+type-C (3/3)

X1-47 A panel (3/3)



Blossom the charm of your quality life

More aesthetic, more elegant, more function, enables you to fully express your creativity and style. Symbol of lightness, thin and sleek, the new range is a breath of fresh air. Each object is a beautiful whole unto itself. let your desire for elegance soar.

● White ● Gold ● Gray ● Black

Switch socket



X4-01
1 gang 1 way switch

X4-02
1 gang 2 way switch



X4-09
1 gang 1 way switch

X4-10
1 gang 2 way switch



X4-17
1gang Doorbell switch



X4-21
1 gang duplex socket



X4-03
2 gang 1 way switch

X4-04
2 gang 2 way switch



X4-11
2 gang 1 way switch

X4-12
2 gang 2 way switch



X4-18
1 gang universal socket



X4-22
Double duplex socket



X4-05
3 gang 1 way switch

X4-06
3 gang 2 way switch



X4-13
3 gang 1 way switch

X4-14
3 gang 2 way switch



X4-19
Double duplex socket



X4-23
1gang 1way switch with indicator
1gang socket



X4-07
4 gang 1 way switch

X4-08
4 gang 2 way switch




X4-15
4 gang 1 way switch

X4-16
4 gang 2 way switch



X4-20
1gang 1way switch with indicator
1gang universal socket

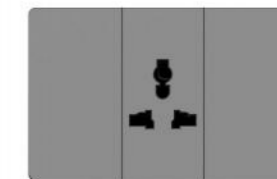


X4-24
1 gang multi socket

Switch socket



X4-25
1gang universal 2 PIN socket

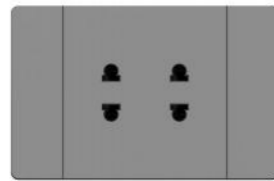


X4-26
2gang universal 2 PIN socket




X4-27
3gang universal 2 PIN socket



X4-28
1gang 1way switch with indicator
1gang universal 2 PIN socket

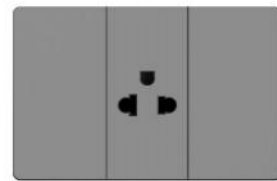


X4-29
1gang universal socket

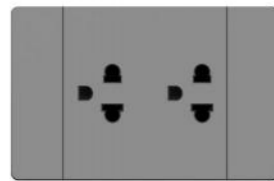


X4-30
Double duplex socket




X4-31
3 gang universal socket

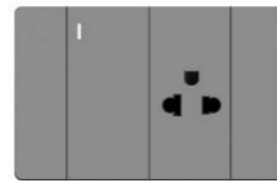

X4-32
1gang 1way switch with indicator
1gang universal socket

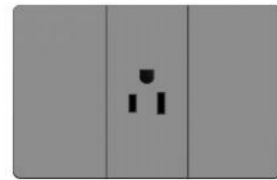


X4-33
1 gang duplex socket

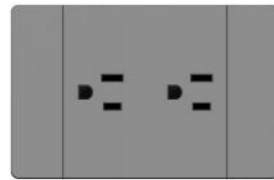

X4-34
Double duplex socket



X4-35
3 gang duplex socket

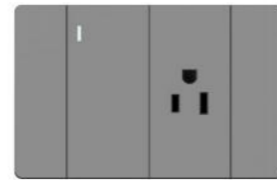

X4-36
1gang 1way switch with indicator
1gang socket



X4-37
1gang 1way switch with indicator
2gang socket



X4-38
1gang 1way switch with indicator
2gang universal socket




X4-39
2gang 1way switch with indicator
1gang universal socket



X4-40
2gang 1way switch with indicator
1gang socket

Switch socket

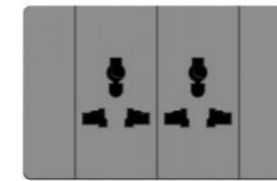

X4-41
2gang multi socket



X4-42
1gang 1way switch with indicator
1gang multi socket




X4-43
TV socket




X4-44
1 gang satellite socket



X4-45
1 gang telephone socket

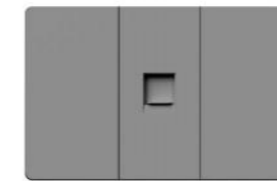

X4-46
1 gang Data socket

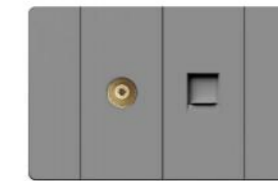

X4-47
1 gang RJ11 telephone socket
1 gang satellite socket



X4-48
1 gang Dimmer
1 gang Fan speed controller



X4-49
1gang 2USB(A+C)socket
15A 127V-250V-1gang multi socket



X4-50
1gang 2USB(A+C)socket
15A 127V-1gang socket



X4-51
1gang 2USB(A+C)socket
15A 127V-1gang universal socket




X4-52
15A 127V-Double duplex socket
with 2USB(A+C)



X4-53
16A 127-250V-universal Double
duplex socket with 2USB(A+C)

Function keys

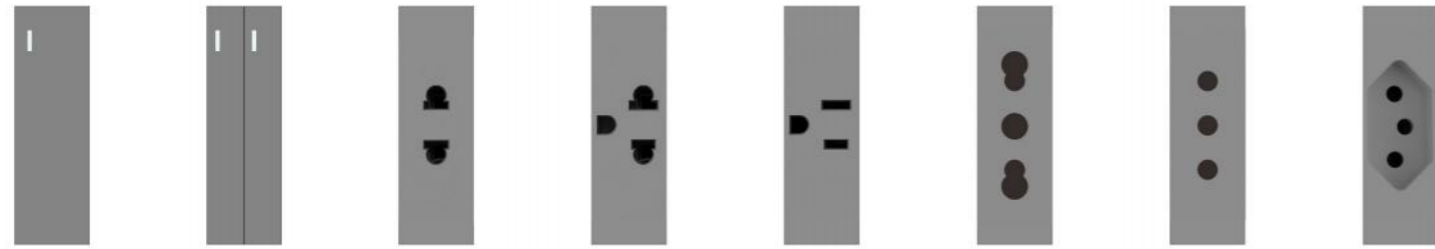

X4-01
1 gang 1 way switch (1/3)
1 gang 2 way switch (1/3)
1 gang 3 way switch (1/3)

X4-02
2 gang 1 way switch (1/3)
2 gang 2 way switch (1/3)

X4-03
2P socket (1/3)


X4-04
2P socket+T (1/3)

X4-05
2P socket+T (1/3)

X4-06
2P socket+T (1/3)

X4-07
2P socket+T (1/3)

X4-08
10A 2P socket+T (1/3)
20A 2P socket+T (1/3)

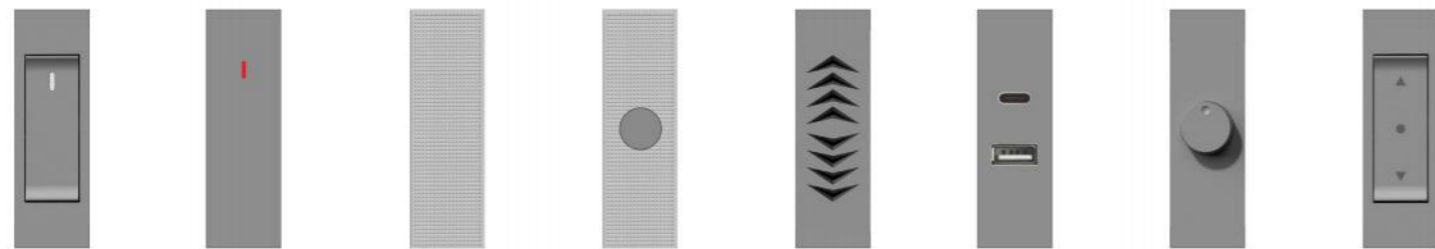

X4-09
20A switch (1/3)

X4-10
20A switch (1/3)

X4-11
Sensor switch (1/3)

X4-12
Emergency light (1/3)

X4-13
Beep switch (1/3)

X4-14
USB+type-C (1/3)

X4-15
Fan speed (1/3)
Light dimmer (1/3)

X4-16
Curtain switch (1/3)



X4-17
Satellite socket (1/3)

X4-18
Computer socket (1/3)
TEL socket (1/3)

X4-19
voice operated switch (1/3)
Touch delay switch (1/3)

X4-20
Blank (1/3)

X4-21
Blank (1/6)

X4-22
1 gang 1 way switch (1/2)
1 gang 2 way switch (1/2)
1 gang 3 way switch (1/2)

X4-23
2 gang 1 way switch (1/2)
2 gang 2 way switch (1/2)

X4-24
2P socket (1/2)



X4-25
2P socket+T (1/2)

X4-26
2P socket+T (1/2)

X4-27
2P socket+T (1/2)


X4-28
Satellite socket (1/2)

X4-29
Computer socket (1/2)
TEL socket (1/2)

X4-30
USB+type-C (1/2)

X4-31
Fan speed (1/2)
Light dimmer (1/2)

Function keys

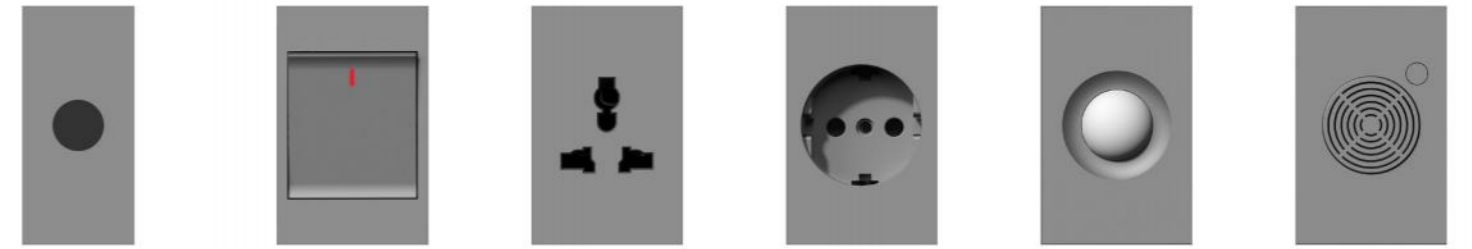

X4-32
voice operated switch (1/2)
Touch delay switch (1/2)


X4-33
20A switch (2/3)

X4-34
2P socket+T (2/3)

X4-35
European socket (2/3)

X4-36
Motion Sensor (2/3)

X4-37
Doorbell with sound (2/3)

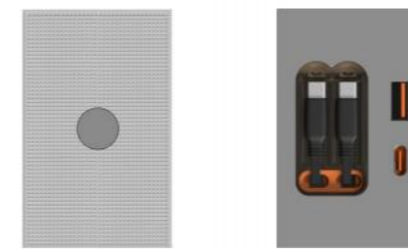

X4-38
Emergency light (2/3)

X4-39
Expansion cable fast charging socket (2/3)




X4-40
1 gang 1 way switch (3/3)
1 gang 2 way switch (3/3)
1 gang 3 way switch (3/3)

X4-41
Duplex socket 2P+T (3/3)

X4-42
Duplex socket 2P+T (3/3)

X4-43
A panel (1/2)

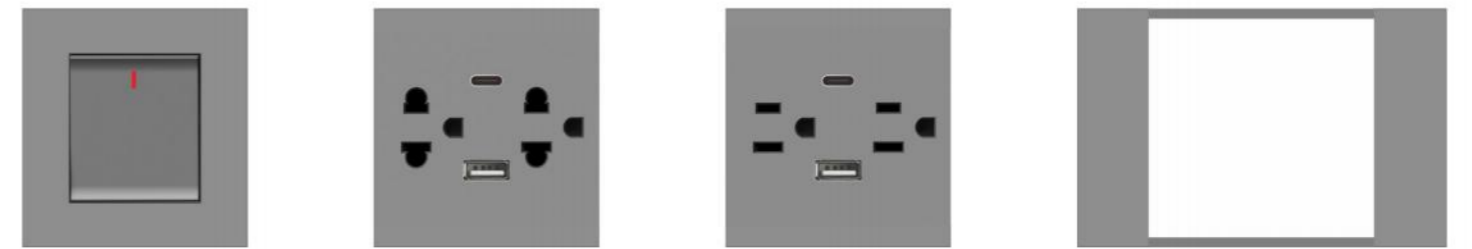

X4-44
20A switch (3/3)

X4-45
Duplex socket 2P+T+USB+type-C (3/3)


X4-46
Duplex socket 2P+T+USB+type-C (3/3)

X4-47
A panel (3/3)




USB带伸缩线插座

USB socket with expansion cable

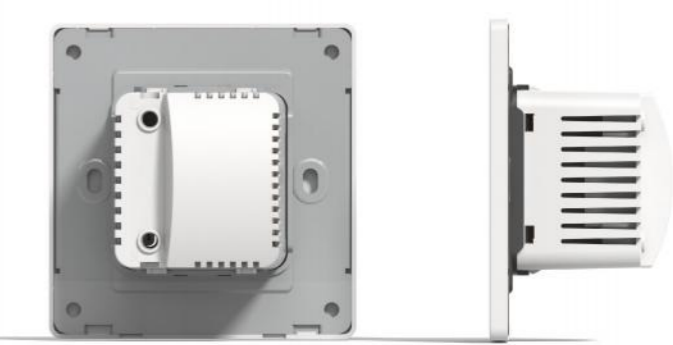





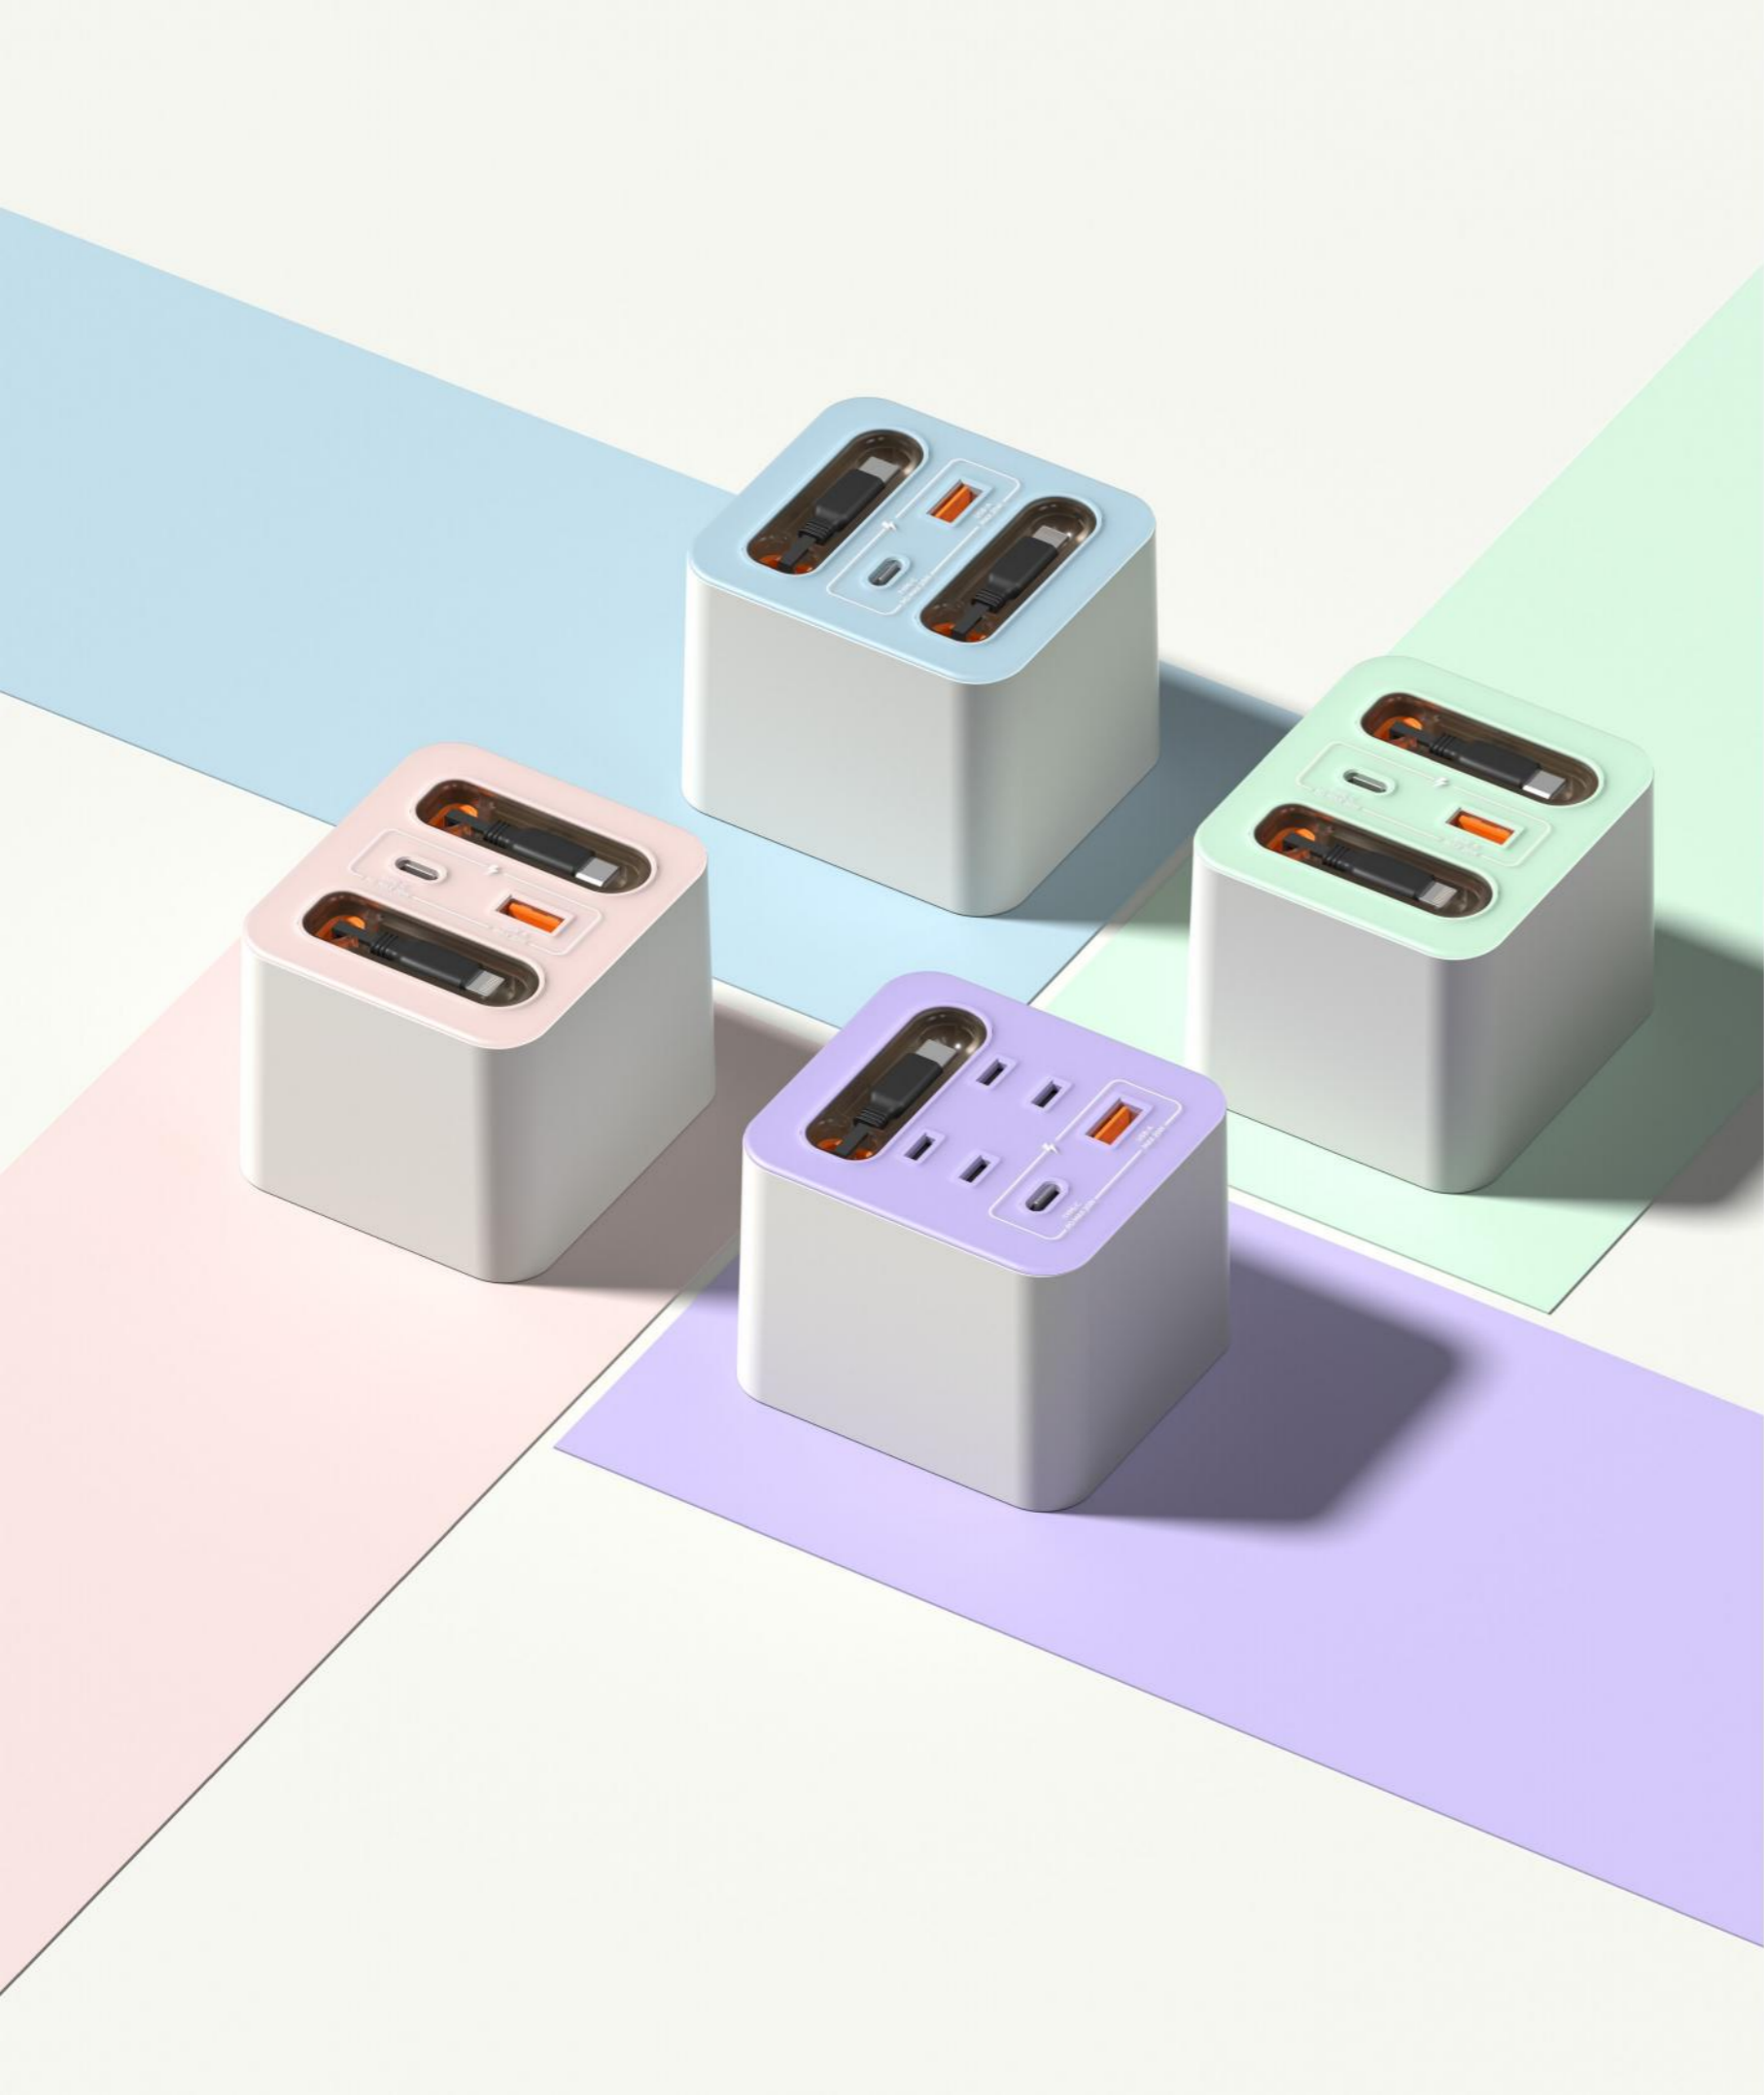

魔方伸缩线插座

小巧/便携/低温



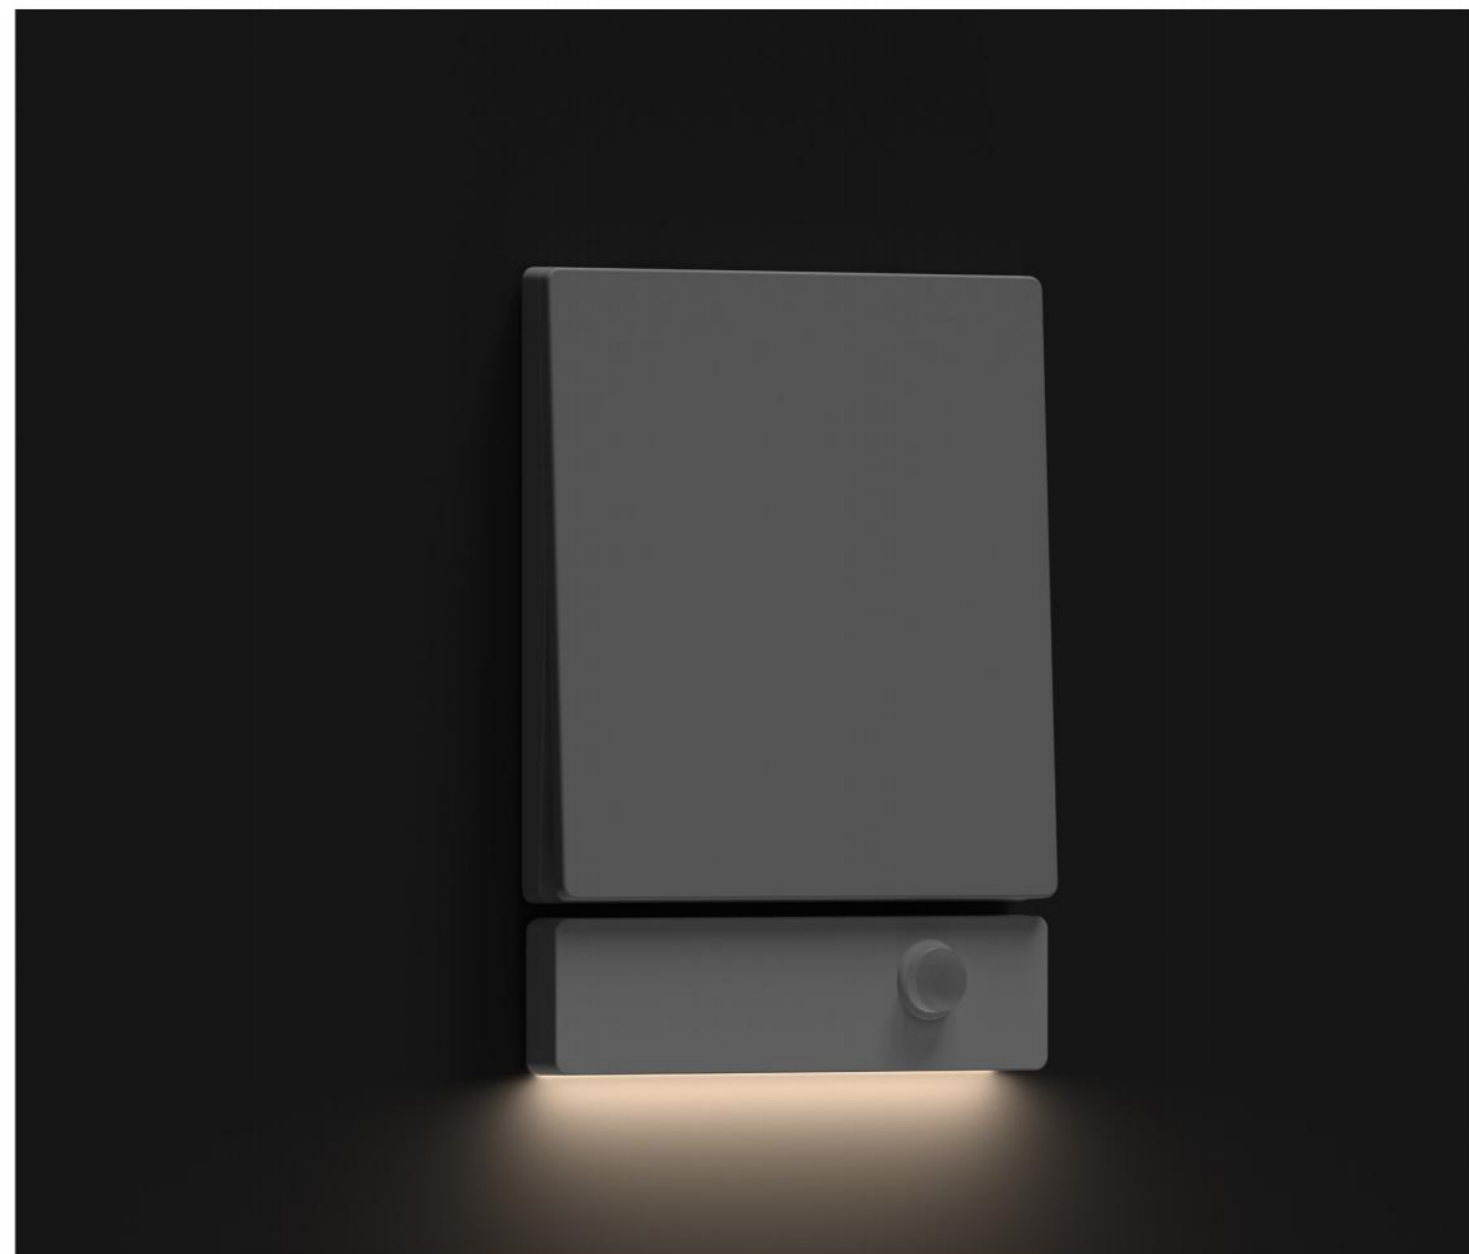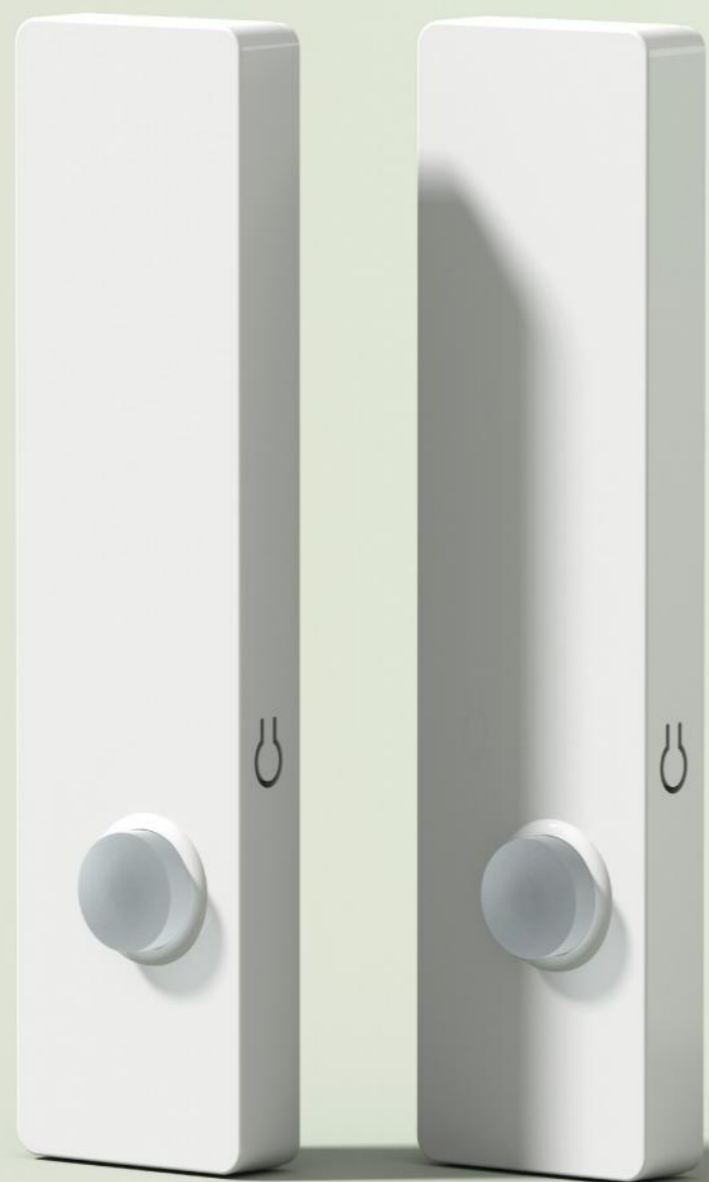

人体感应小夜灯

智能/敏锐/高效/节能

*长86mm宽20mm

